INSTALLATION INSTRUCTIONS

Post Feet

for Freestanding Screens

Accessory for OUTDECO Post & Frame System

Suitable for pro builders and DIY crafters. Installation requires 2 people.

Illustrations not to scale. Black Posts rendered in gray.

Read ALL instructions completely before starting. Follow step-by-step. DO NOT JUMP AHEAD!

We recommend following best building practices for installing **OUTDECO Slat Fence Kits** in accordance with their intended purpose. Examples shown in this document are installation suggestions. Adjust installation configurations to meet your specific project requirements. If in doubt, consult a professional. We recommend checking with proper authorities about building codes/standards that may apply to your project. The **OUTDECO Post & Frame System** has a **5-Year Limited Material & Structural Warranty** when installed per these instructions. Installers assume responsibility for the installation. *(See full warranty at outdecousa.com or design-vu.com.)*

Post Feet Features

For use with **OUTDECO's Post & Frame System** and **Decorative Privacy Panels** or **Slat Fencing**.

- **Post Feet** holes *(Fig. 1)* align with base plates of **OUTDECO 75"** or **52" Surface-Mount Posts** for quick and easy installation.
- Galvanized steel with black powder-coating
- **Post Feet** can be attached to **Posts** before or after installing **Decorative Panels or Slats.**
- **CAUTION:** If screens are placed outdoors in windy conditions, temporarily secure **Post Feet** to surface.

WHAT'S IN THE BOX

#	ITEM
2	**Post Feet –** Black powder-coated galvanized steel
8	**Post Feet Hex Bolts –** 8.8mm ø x 1"L

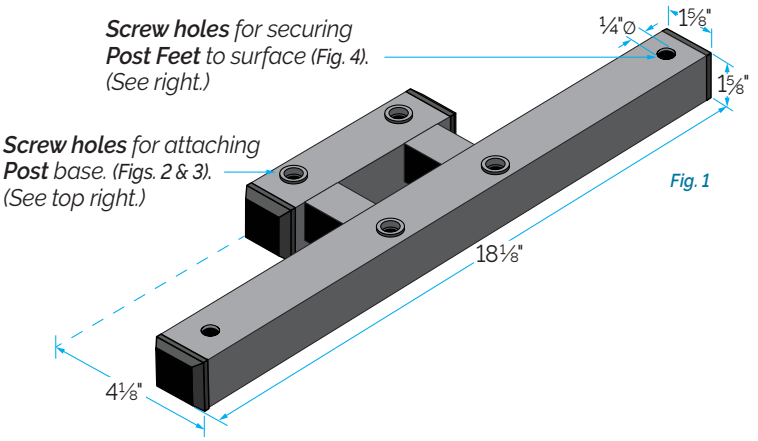

Installing Post Feet

on OUTDECO 75" or 52" Surface-mount Posts

***Post Feet may be attached before** (Fig. 2) **or after** (Fig. 3) attaching Panel Frame Kits and Panels to Posts. See Kit instructions.*

1. Position **Post** base plate over center of **Post Feet** and align screw holes. Check that **Post** is level.
2. Insert included **Post Feet Hex Bolts** and tighten securely, but do not overtighten *(Figs. 2 & 3)*.

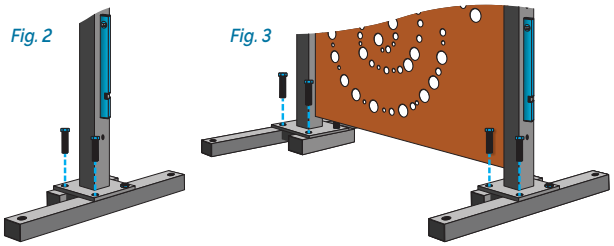

IMPORTANT: ***Installed screens should be moved by 2 or more people** to avoid damage to Panels and Panel Frames.*

Securing Post Feet

in Outdoor Windy Conditions

1. To secure screens, temporarily attach to surface.
2. Pre-drill the surface and screw through the ¼"ø holes at each end of the **Post Feet** *(Fig. 4)*. Use minimum 3"L screws with washers *(not included)*.
3. Add sand bags if necessary.

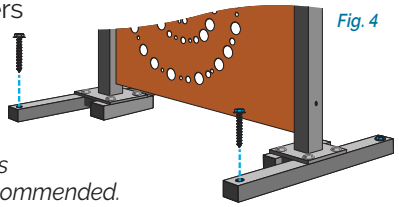

IMPORTANT:
*Locating screens outdoors in **intense winds** is not recommended.*

RELATED OUTDECO PRODUCTS

Post & Frame System

- **Surface-Mount Post:** 75" *(Figs. 5-9, 11, 12)* & 52" *(Fig. 10)*
- **Panel Frame Kit:** 24"x48", 48"x70", 36"x72"; Attaches to posts, holds Panels – Wood *(Figs. 7-8)*, WPC* *(Figs. 9 & 10)*, Poly *(Fig. 11)*
- **Slat Fence Kit:** 24"H, 72"H; Attaches to posts, holds WPC* Fence Slats *(Fig. 12)*

* *Wood-Poly Composite*

CONFIGURATION EXAMPLES

Movable panel screens and slat fencing enhance décor or partition private spaces – indoors or outdoors.

Decorative Privacy Panels | **Slat Fencing**

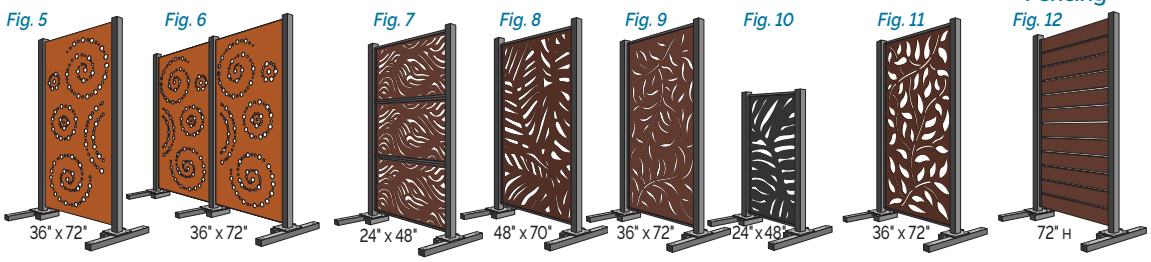

Metal Panels 36"x72" — Mounts directly to Posts

Wood & WPC* Panels 24"x48", 36"x72", 48"x70" — Mounts with Panel Frame Kit

Poly Panels 24"x48", 36"x72" — Mounts with Panel Frame Kit

WPC* Slats 24" or 72" H — Mounts with Slat Fence Kit

rev. 06-2026

OUTDECO USA — Metal & Wood Panels, WPC Slats, Posts, Frame & Slat Kits outdecousa.com

DESIGN VU — Poly Panels, Posts, Frame Kits design-vu.com

Designed, manufactured, & distributed by OUTDECO USA, INC., Oceanside, CA 92056
©2026 OUTDECO USA, INC. All rights reserved.